



**NR-EH05**

+12B	1
SIG	2
ADDR	3
CODE	4
HOLD/SINC	5
GND	6

**NR-EH05**

+12B	1
SIG	2
ADDR	3
CODE	4
HOLD/SINC	5
GND	6

**NC-100K-IP**

+12B	1
SIG	READER1
GND	2

+12B	1
SIG	READER2
GND	2

+12B	1
W0	WEIGAND
W1	2
GND	3

1	DC 1
2	GND
3	DC 2

1	RTE
2	GND
3	DRTE

1	HOLD
2	GND
3	CIN

-EMG	EMERGENCY
+EGM	
GND	

+12 B	1
GND	2
BAT	3

RELAY 1	CMN
	NO
	NC

RELAY 2	CMN
	NO
	NC

RELAY 3	CMN
	NO
	NC

RELAY 4	CMN
	NO
	NC

Ethernet
----------

**UIM-01**

1	O2
2	GND
3	
4	
5	IN 2
6	GND
7	IN 1

GND	1
+12B	2

**Турникет PERCo-TBC-01**

Разъем XT 1.H	
	Pass A
	Pass B
	Common
Разъем XT 1.L	
	COM
	Unlock A
	Unlock B
Разъем XT1	
	Изьять карту
	GND

**Управление от пожарной сигнализации**

NO
COM